


J-BOX

WIRING INSTRUCTIONS

- 1 - Strip the wire coming from the junction box and from the fixture, twist them together with the white wires, insert a connector and twist tightly.
- 2 - Do the same procedure for the black wire.
- 3 - If the cable coming from the structure is flat, strip the line or rubber wire, twist it with the white wire, insert a connector and twist tightly.
- 4 - Strip the yellow and green ground wire, twist them together, insert a connector and twist tightly.
- 5 - If the junction box has no ground wire connect the fixture wire to the cross bar wires.
- 6 - If the cross bar has no ground wire, connect the fixture wire to the yellow screws present!

INSTRUCTION POUR LE CABLAGE

- 1 - Débarber les fils provenant de la boîte de jonction et de la structure, enrouler les fils blancs entre eux, introduire un connecteur et tordre avec force.
- 2 - Effectuer la même opération avec le fil noir.
- 3 - Si le câble de la structure est du type plat, débiter le fil avec la règle ou la scie, l'enrouler avec le blanc, introduire un connecteur et tordre avec force.
- 4 - Débiter les fils de terre jaune et vert, les enrouler entre eux, introduire un connecteur et tordre avec force.
- 5 - Si la boîte de jonction n'est pas munie de fil de terre, connecter le fil de la structure au fil relié à la bride.
- 6 - Si la bride n'est pas munie de fil de terre, relier le fil de la structure à la vis jaune présente sur celle-ci.

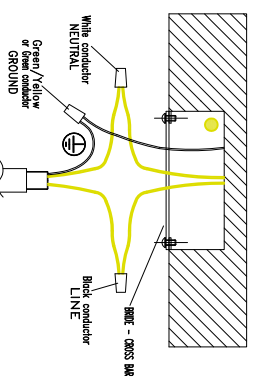

•Fabbian

F46 G01 A

Rev,00 - 20.03.16

Pag.
1 di 1